

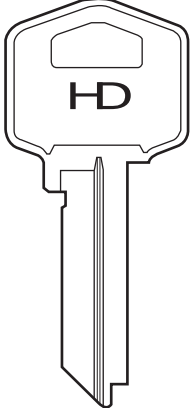



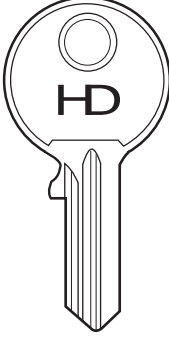

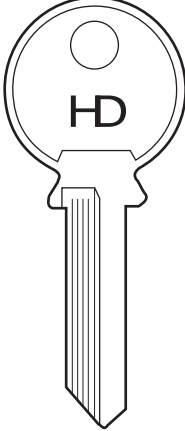


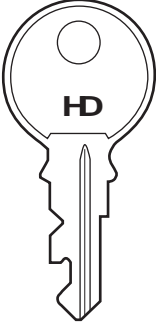



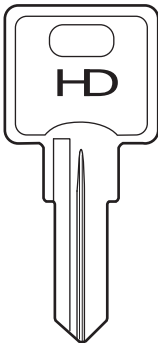

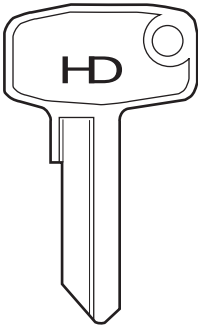

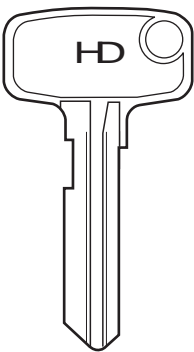




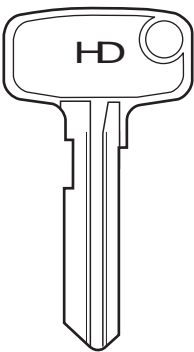

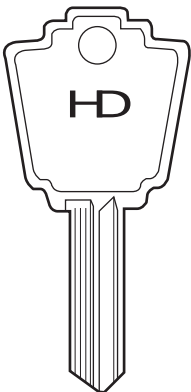

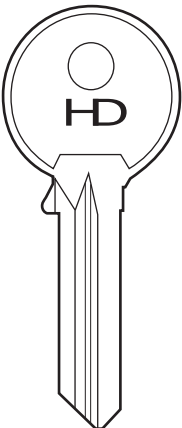

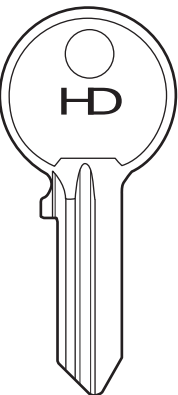

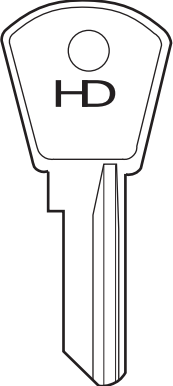

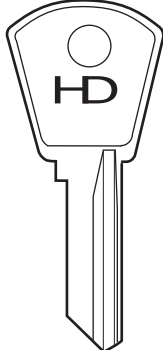

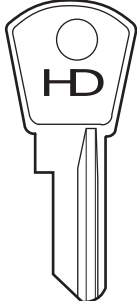

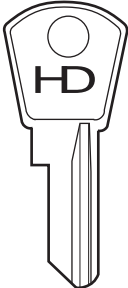

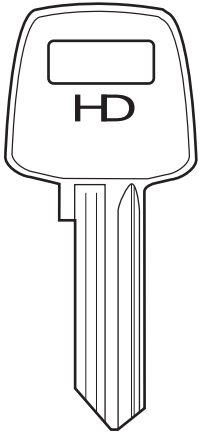


N R	NT LAIDLAW	OJMAR			OJMAR			
 <p>HD</p>  <p>NR1R</p>	 <p>HD</p>  <p>TE7 H601</p>	 <p>HD</p>  <p>HR1</p>	 <p>HD</p>  <p>OJ1</p>	 <p>HD</p>  <p>OJ2</p>	 <p>HD</p>  <p>OJ4R</p>  <p>OJ4</p>			
OJMAR		OLIVETTI		OLYMPIC	OMIV			
 <p>HD</p>  <p>OJ10</p>	 <p>HD</p>  <p>OJ6R</p>	 <p>HD</p>  <p>OJ13</p>	 <p>HD</p>  <p>OJ7R</p>	 <p>OJ14</p>	 <p>HD</p>  <p>OLT1</p>	 <p>HD</p>  <p>OLT6R</p>	 <p>HD</p>  <p>1171B</p>	 <p>HD</p>  <p>OV2</p>
ORO	PAPAIZ				PAPAIZ			
 <p>HD</p>  <p>ORO1</p>	 <p>HD</p>  <p>PZ1 H256</p>	 <p>HD</p>  <p>PZ2 H257</p>	 <p>HD</p>  <p>PZ3 H258</p>	 <p>HD</p>  <p>PZ4 H259</p>				

PAPAIZ


PAPAIZ

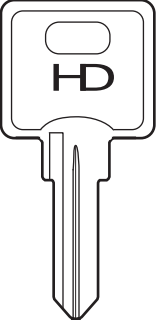PAPAIZ

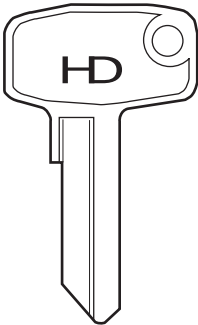


Genuine
Blank

KB2A

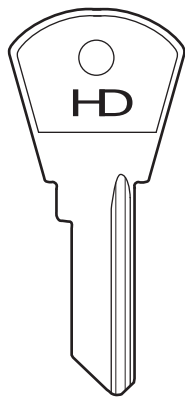


Genuine
Blank

KB3A

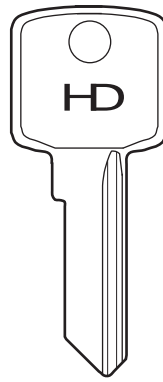

Genuine
Blank

KB3C

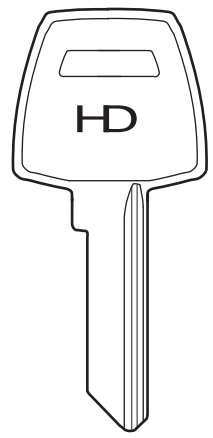


Genuine
Blank

KB3E


PAPAIZ

P.C. (CORTELLEZZI)

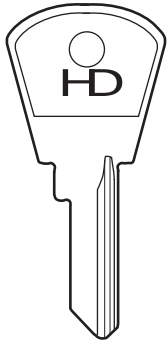


Genuine
Blank

KB5A

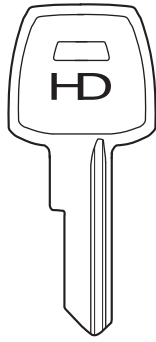


Genuine
Blank

KB8A

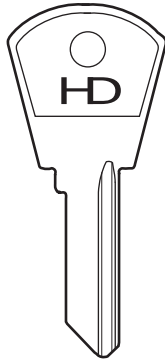

Genuine
Blank

KB9A

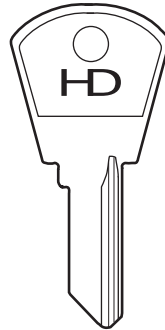


Genuine
Blank

KB10A




PC3

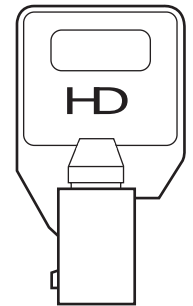



PC12T PC15T


P.C. (CORTELLEZZI)


PENN

PHOENIX


POLLACK

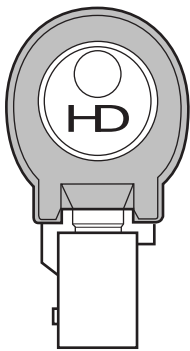



SLC1TP SLC2TP

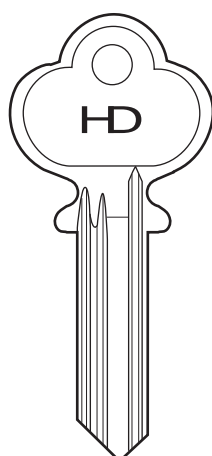



1016N-P2

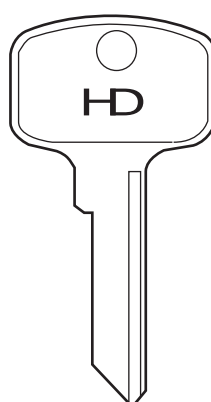


PH1
H587

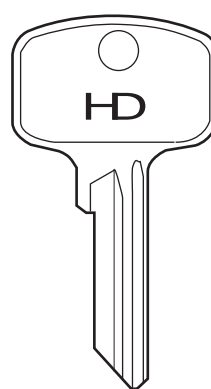


PH2
H588






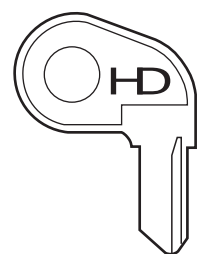



PK1

POS

PREFER

PREFER

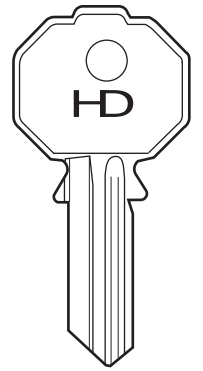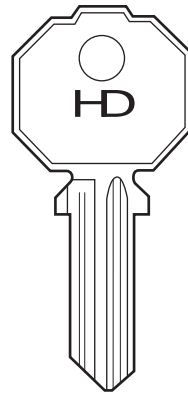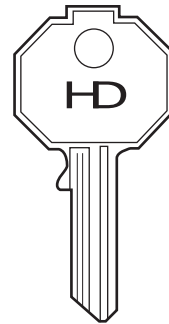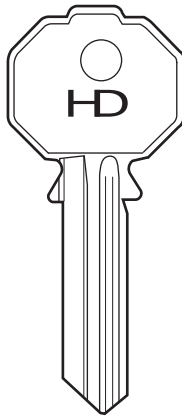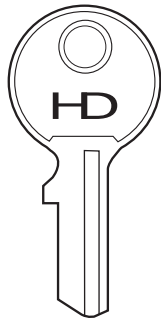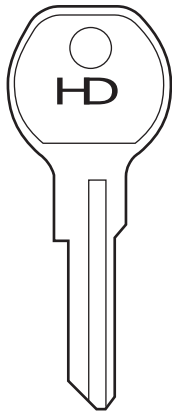

GX... 91-320 HX... 91-320


GH1
H471


GH1S
H467


PS1


9PT
H163


PF1







PF2


PF2S
H566

PREFER

PREFER

PREFER

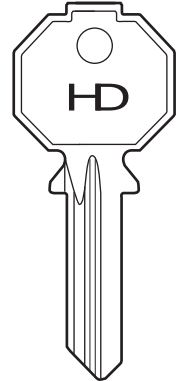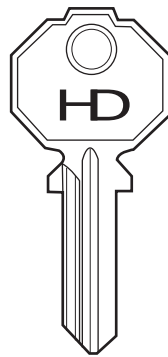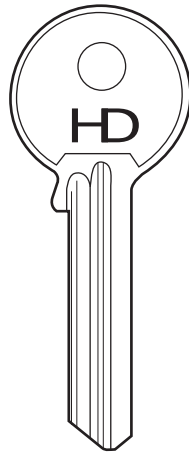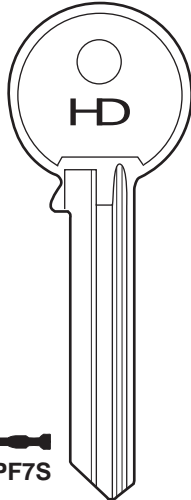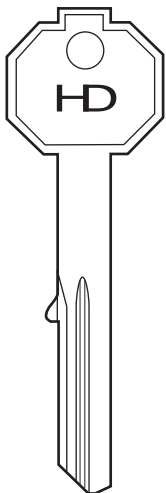


PF3


PF7S

PF7


PF8


PF9








PF15


PF073

PF072

PREFER

PREMIER PUNDRA

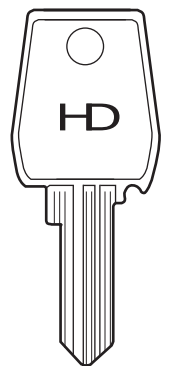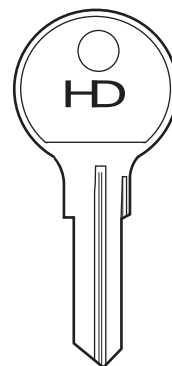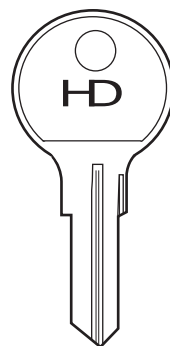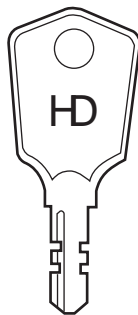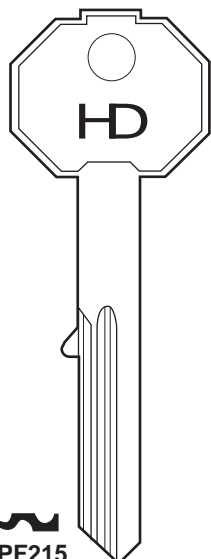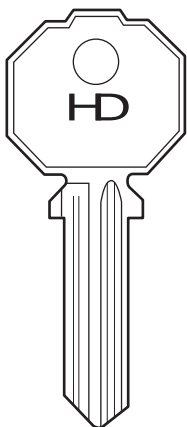


PF092S


PF215

F4



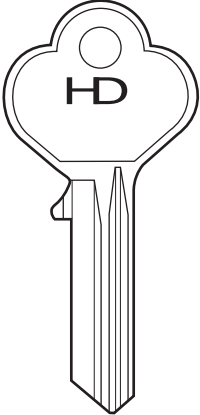

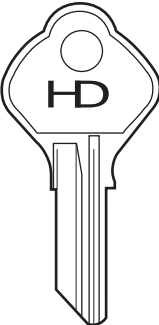




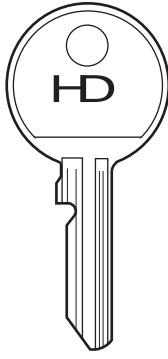




WKPR1
WL53


PU1
H254

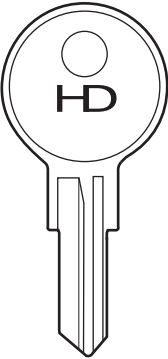

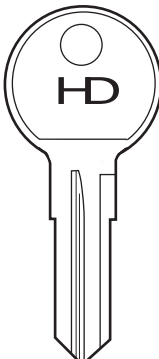
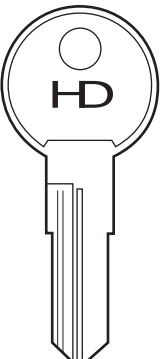


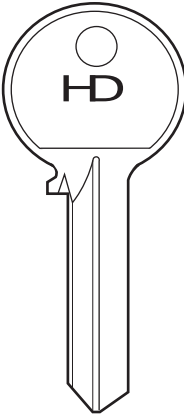
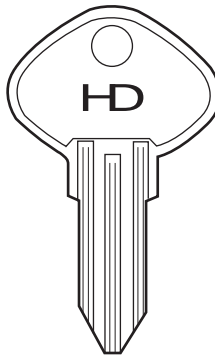

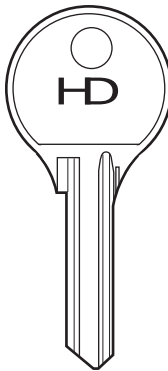

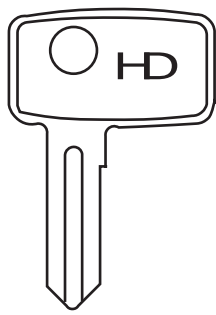



PU3
H255


PU4



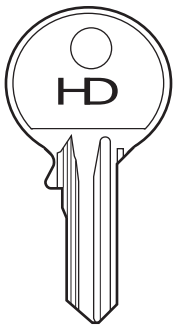


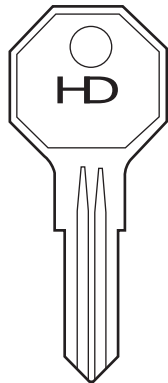



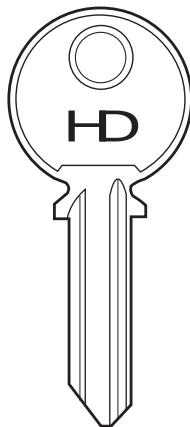

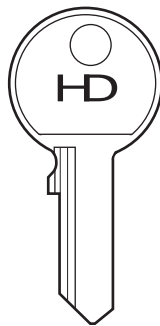




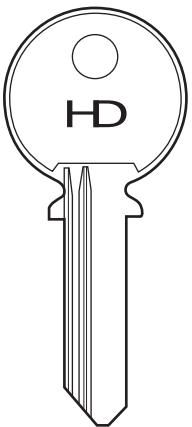

PUNDRA	PYCM	RABBIT	REGAL	REGENT
--------	------	--------	-------	--------

  PU5 <small>H281</small>	 LORI  X1014F <small>H330</small>	  F00V <small>H176</small>  FR00V <small>H177</small>	  11B <small>H25</small>	  136H <small>H86</small>  19C <small>H35</small>  R136H <small>H466</small>  19CR <small>H36</small>
---	--	---	---	---

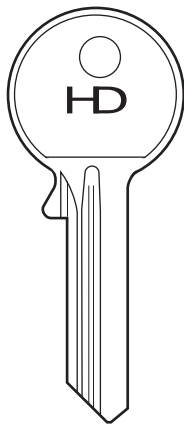

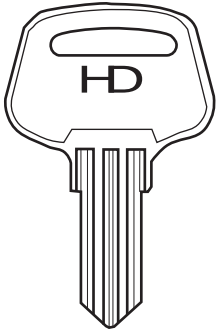

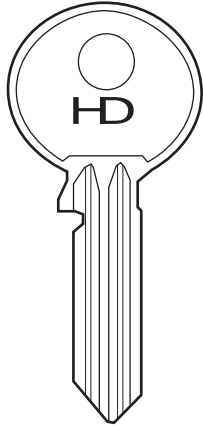

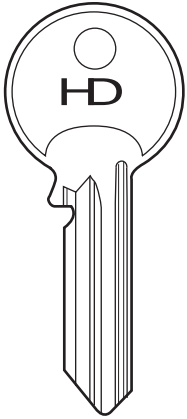
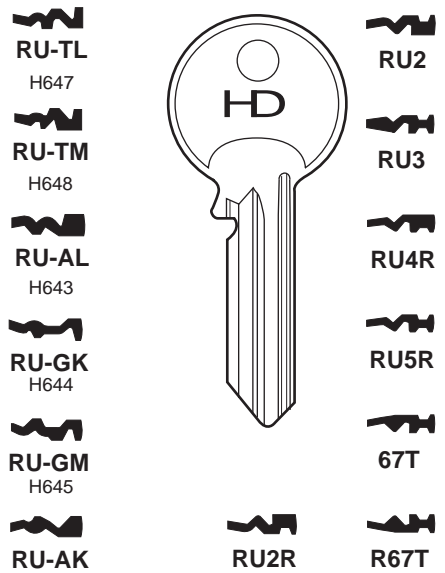
REGENT	RENZ	ROCHE	ROLL IT	ROLL-A-DOOR
--------	------	-------	---------	-------------

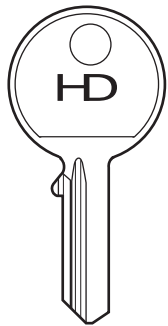  SID1 <small>H281</small>	   REN1 <small>H542</small>  REN1R <small>H543</small>  REN2R	 ROLLER SHUTTERS  RCH1 <small>H625</small>	  RL1 <small>H262</small>	  RD1 <small>H563</small>  RD2 <small>H558</small>
---	--	--	--	---



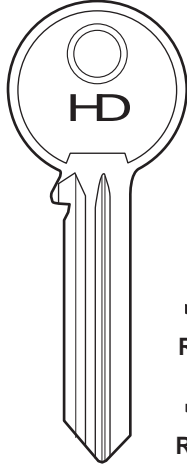


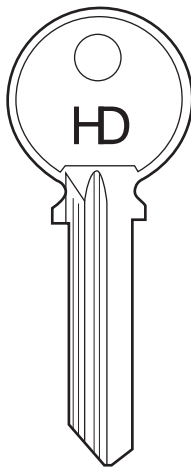

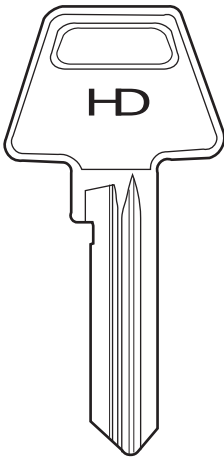

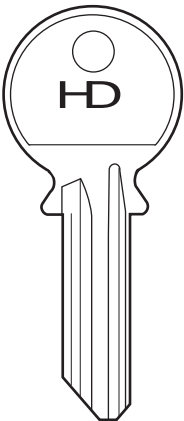

RONIS	RONIS	RONIS
-------	-------	-------

  61JD <small>H55</small>	  R7DC <small>H266</small>  7DC <small>H342</small>	  R034  HVR61 <small>H197</small>  HV61 <small>H196</small>
  R08R	  V61S <small>H332</small>  VR61S <small>H333</small>	  R09
 LAPERCHE  R022		

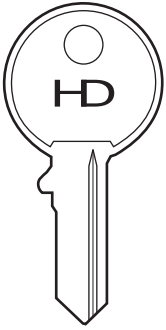

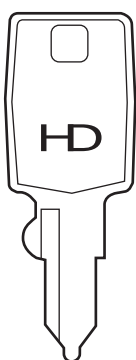

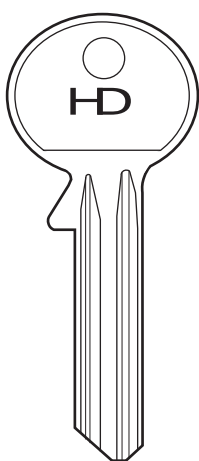

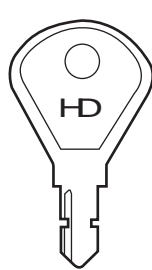

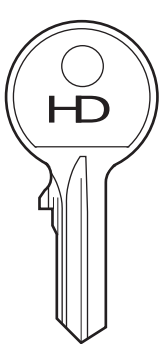

RONIS	ROYAL	RUKO	RUKO
-------	-------	------	------

 F 1-500 H 1-1000  R030 R038R	  ROY1 ROY2 H548 H549	 HNR GL  RU1 RU10R RU-TK RU-AK H605 H583 H646 H642	  RU-TL H647 RU-TM H648 RU-AL H643 RU-GK H644 RU-GM H645 RU2 RU3 RU4R RU5R 67T RU2R R67T
--	--	--	---

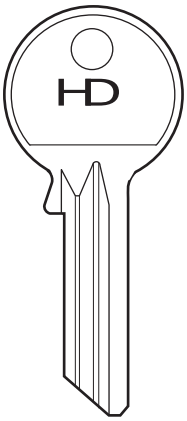RUKO	RUKO	RUSSWIN
------	------	---------

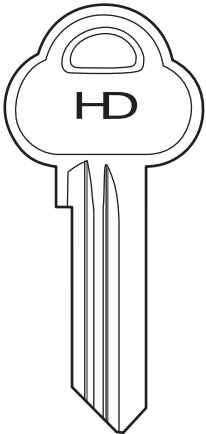  1AR H450	  RU-GK7 RU-GM7  RU-8D RU-7D	  RU15R   RU-11D RU14	  17F H346
--	--	---	--





SAMSONITE	SANTOS	SARACEN	SAREL
-----------	--------	---------	-------

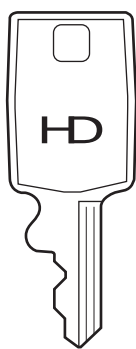  SA1R SA2R SA1 SA2	  SA5 SA3R SA5R SA3 SA4	  LR62US H61	  SRC1	  7DC H342
--	---	---	--	---

SCHLAGE

SCHLAGE

SCHLAGE

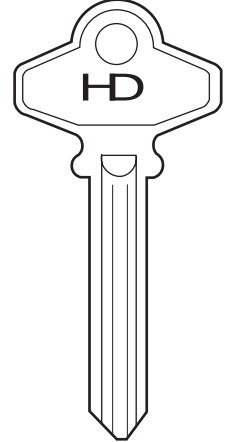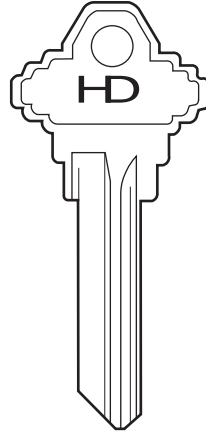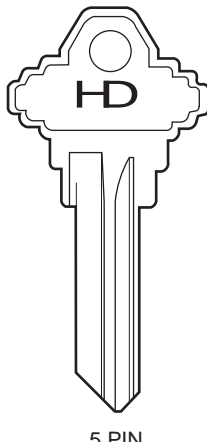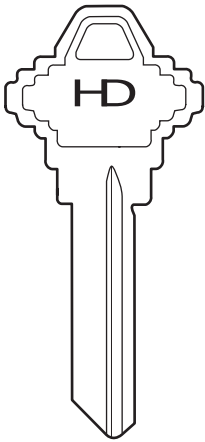

145K
H403



145F
H399



A145G
H408



A145F
H407



145H
H401



145L
H404



A145L
H412



A145J
H410

5 PIN

6 PIN



SH5R



145
H397



145E
H398



145G
H400



145J
H402



A145
H405



A145E
H406



A145H
H409



A145K
H411



707A
H418




707W
H419

SCHLEGEL SCLECTENDAHL

SCOPE

SEA


SECURIKEY

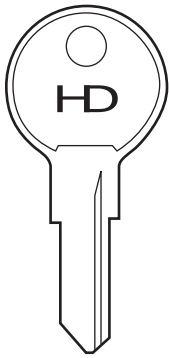


RELIANCE




REL2

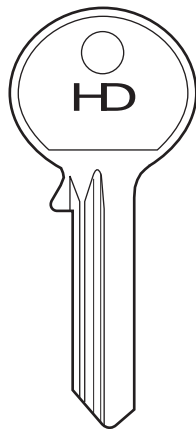


ST1

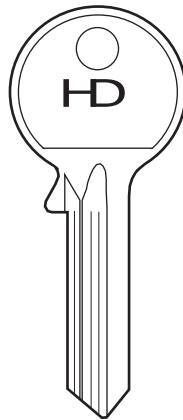


N9CS
H154

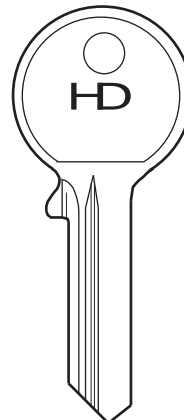

61JD
H55

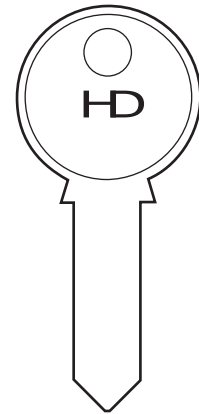

SEB2

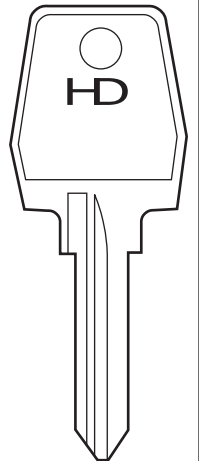


LF29
C271


SECURIKEY SECURISTYLE SECURITY BOX

SEGAL

SELECT

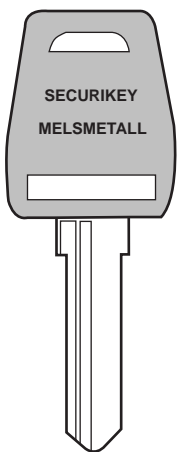


AKPS905

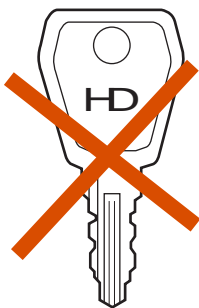


DISCONTINUED
AS A PRECUT
KEY
CUT ON LF40
KEY BLANK



867
WL38

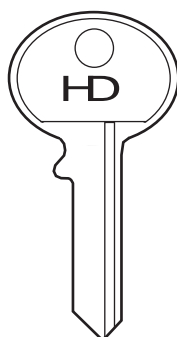


1559

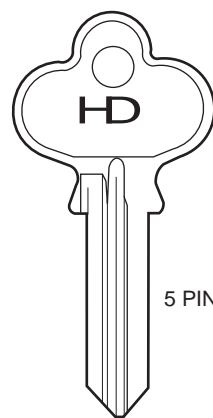

5 PIN




22
H347

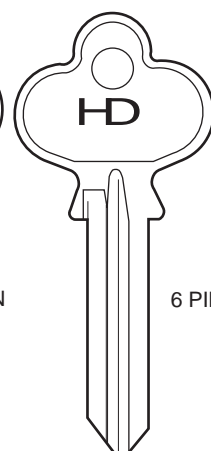

6 PIN



22L
H348

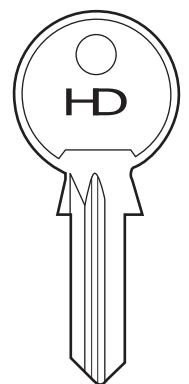

SE1R




SE1

SELECT

SHAW


SHAW

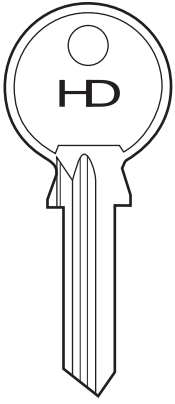


SE3R




SE3

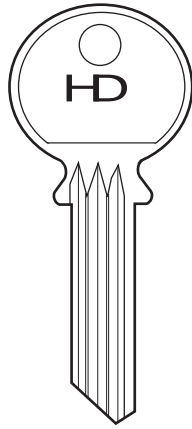


12B
H27

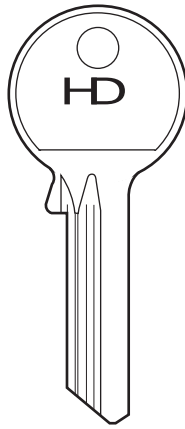

22B
H39

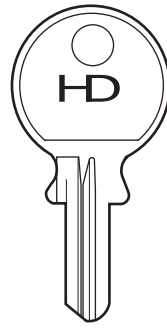


KB800
WL22

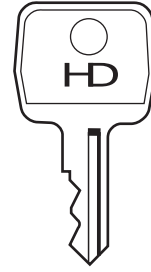

Window lock key
single differ



KB802
WL24

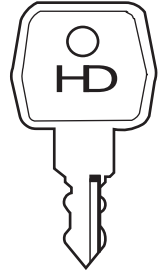

Window lock key
single differ




KB823
WL25


SHAW WALKER SHOWA

SIDLEEN


SIMECA

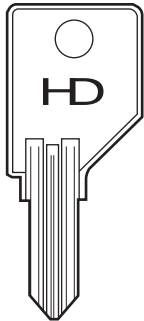


1568
H622

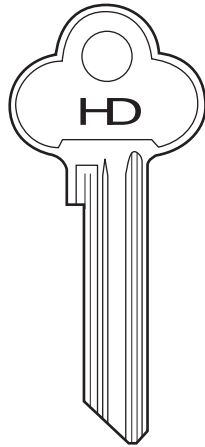


SWA2R

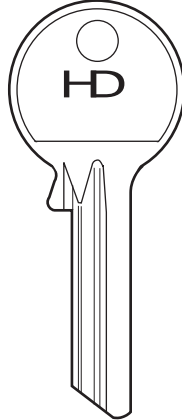


21B
H38

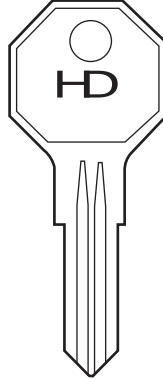

SID1
H281

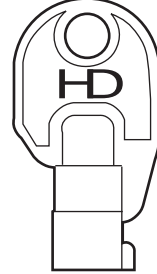

SD3T
CV038

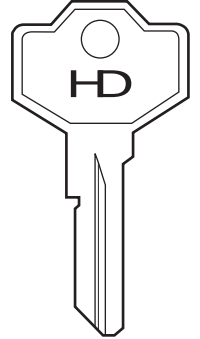

GS4




SM1R

SIMECA


SIMECA

SIS


SIS

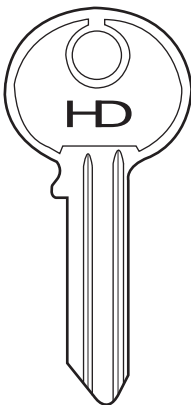

SM2

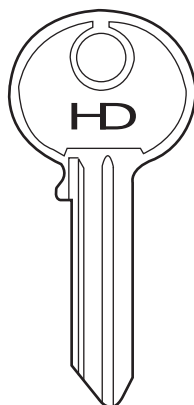

SM3

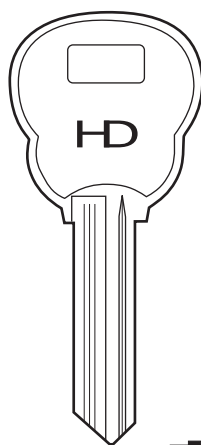


SM6




SM9




SM8

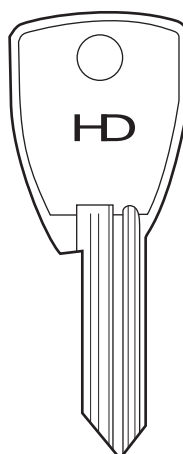


SIS1

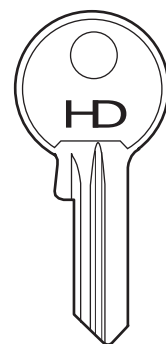


SS1

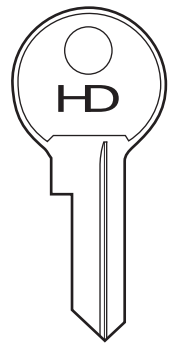


SS10

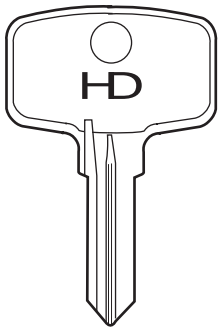SNAP-ON**SOFI****SOFI****SONNETTE**



1527

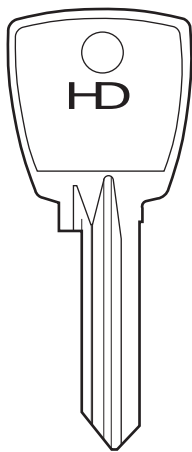



S01
H274

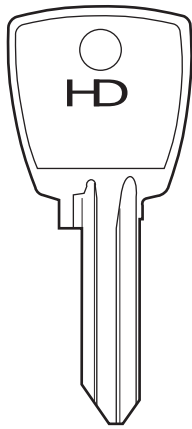


S01R
H275

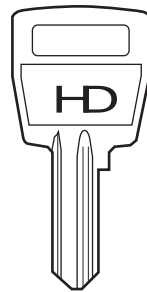



S04R
H276

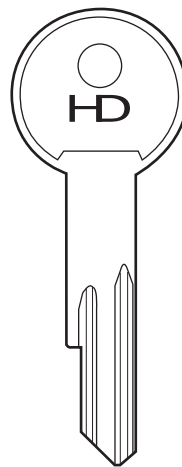


SI5R




SN3R

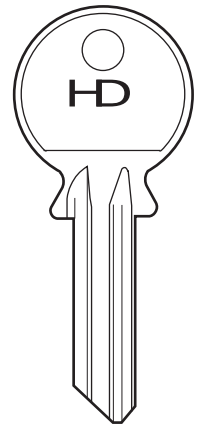



3
H339

SQUIRE**SQUIRE****SQUIRE**



41
H50

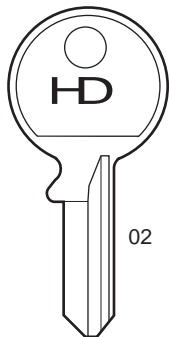



43
H51

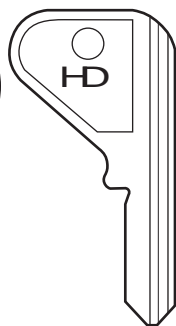


402
H91

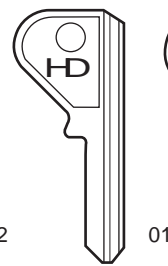



402/1
H92

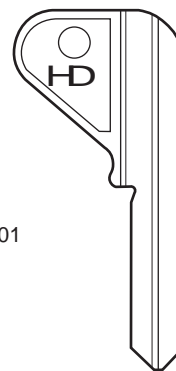



402/2
H440

HS4
SS50
SB50
SS65
SB65

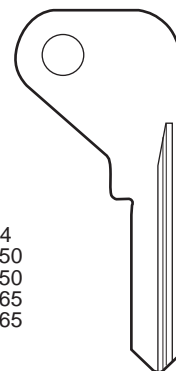



KBATL
GC102

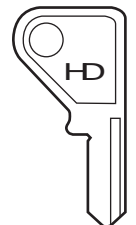


LN1




LNA1
GC095

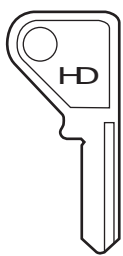SQUIRE**SQUIRE****SQUIRE**

LN2

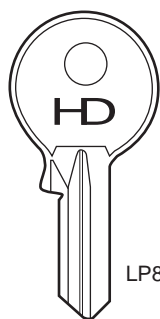


LP8

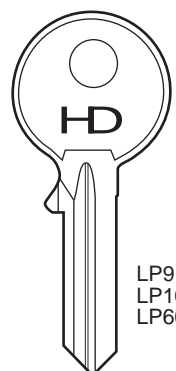


LP9
LP10
LP60




LP6
LP7

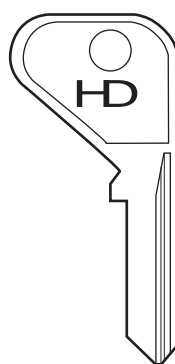

LN3
LN4
LN5
LN60
LN70

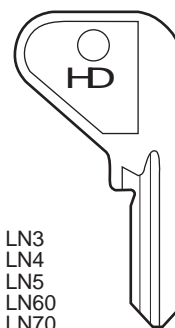

DCL1

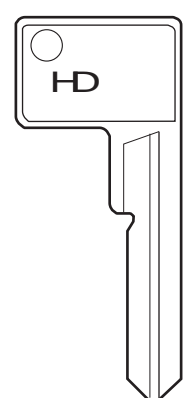

HS4
SS50
SB50
SS65
SB65



LNB1
GC098



LPB1
GC096



LPC1
GC097



SQ1
GC026



SQ4
GC030



SQ5
GC099








SQ11R
H641

STA-LOCK

STA-LOCK

STA-LOCK

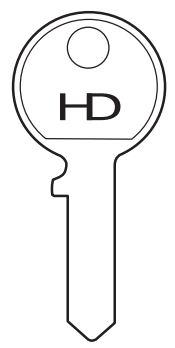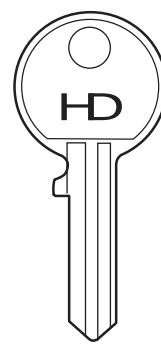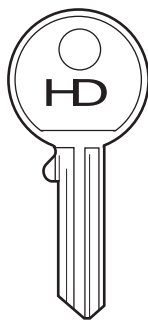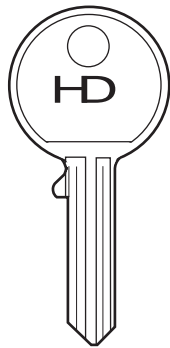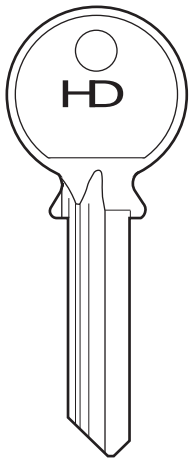

 *GENUINE BLANK*
80N KB250
H66 GC051

 *GENUINE BLANK*
81N KB251
H67 GC046

 *GENUINE BLANK*
82N KB252
H68 GC061

 KB253

 KB256

 KB257







 KB254

 KB255

STA-LOCK

STAR

STAR

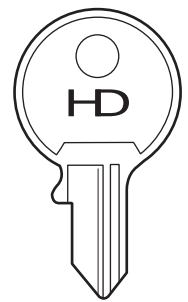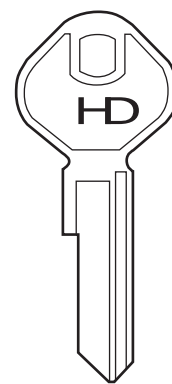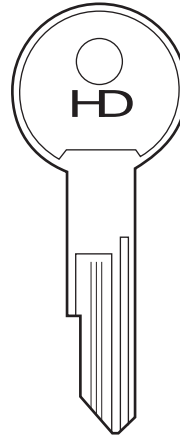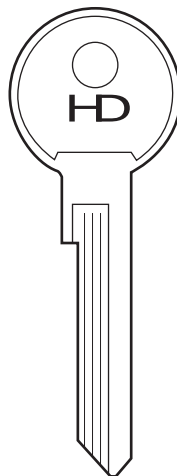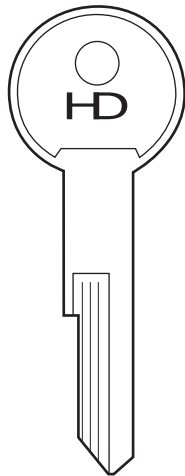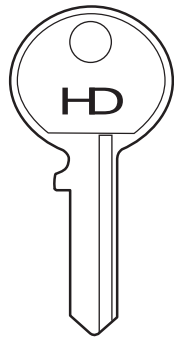

 KB259

 KB258

 STA1  STA1R

 STA2  STA2R

 STA3R







 STA4R

 STA8R

STARLET

STREBOR

STREBOR

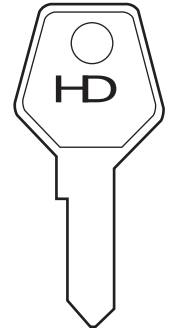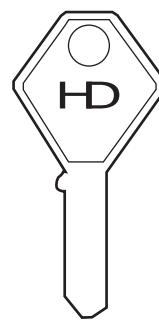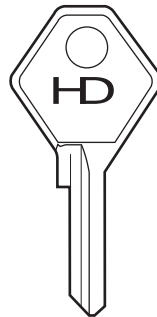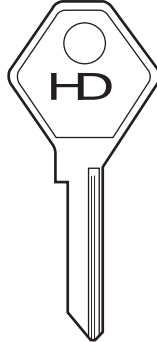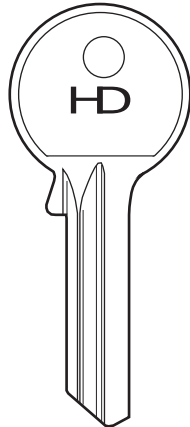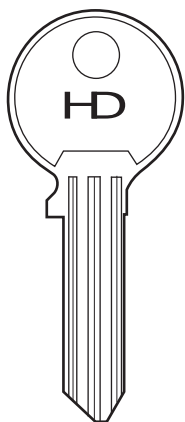

 STL1R

 21B
H38

 KB21
GC023

 KB23
GC042

RR Odd
 SR2
C183

RR Even
 SR1
C184


S

 SR5
C185


STREBOR

STREMLER

STS

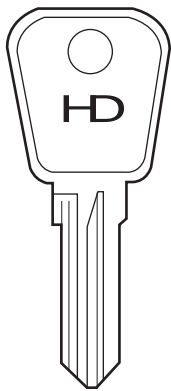



SS/SF
C181

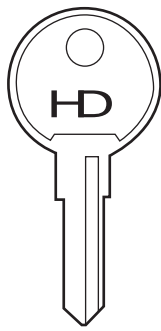



STR5R
Genuine
Blank
KB22R


STR5
Genuine
Blank
KB22

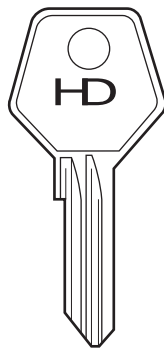


300-369



TS
C34

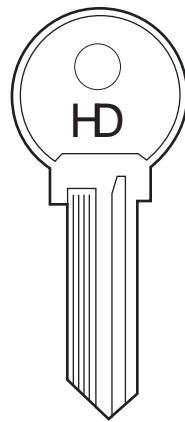


BD2R

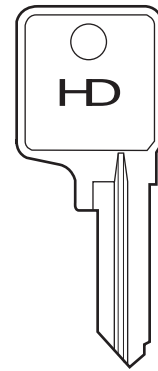


STS1

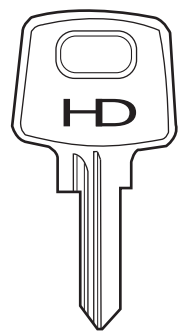



STS1R


STS3


STS

STUV


SUDHAUS

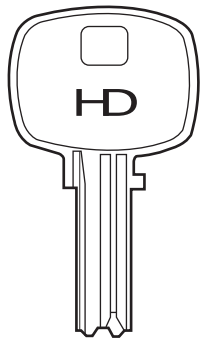



STS5

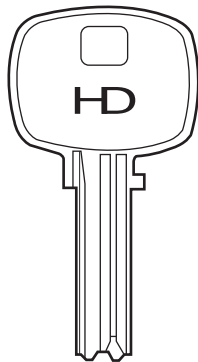


STS6

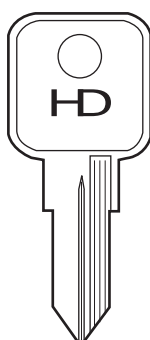


MLM1

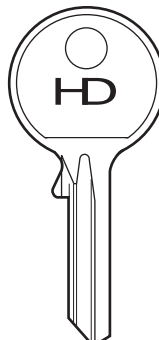



SV1
H277





SV2
H562


SV6R



220




304

SUDHAUS

SUDHAUS

SUDHAUS



322




CARAT


324




326




600

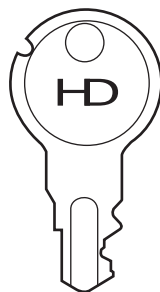


S150

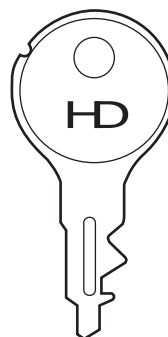

S154

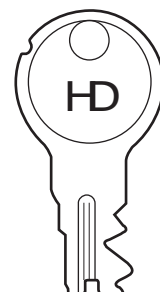


S324

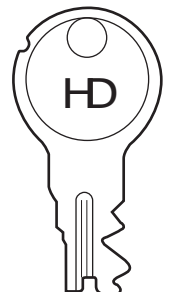

S325

SUDHAUS

SUREX

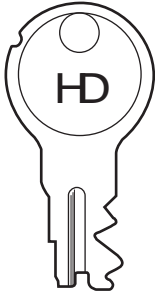

S326



S327




S328




SR2R




SR7

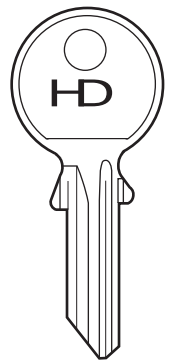


SX1
H280


TALON

TARZEN


TAYLOR

TEKA


TEM

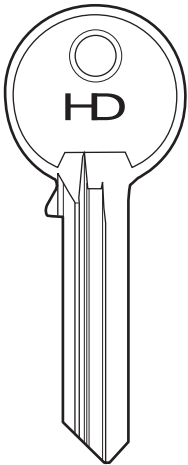



TAL1
H506

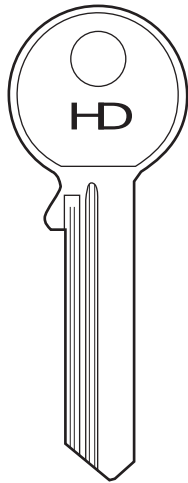



TZN1

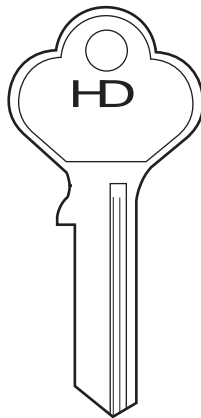



141GE
H396

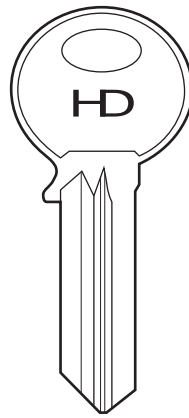


TK1

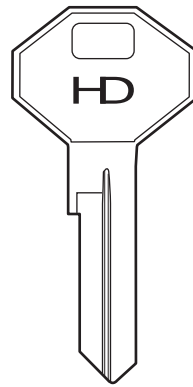


TK5

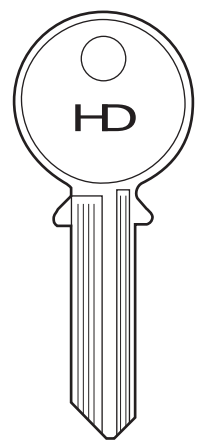



TEM155


TESA

TESA


TESA

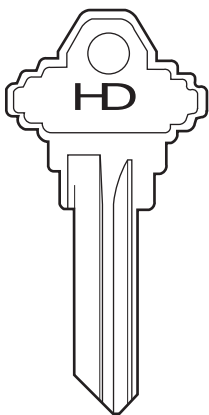


145
H397

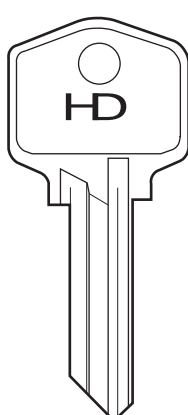

 
TE1 TE2
H7 H300

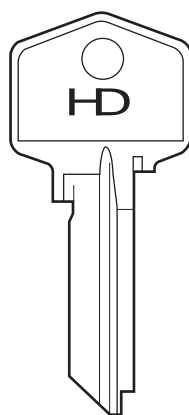



TE3
H301


TE6R
H501



TE6
H499


TE5
H452


TE4
H302

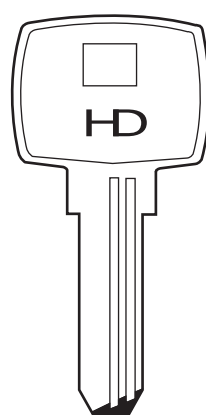

 
STE4 TE4R

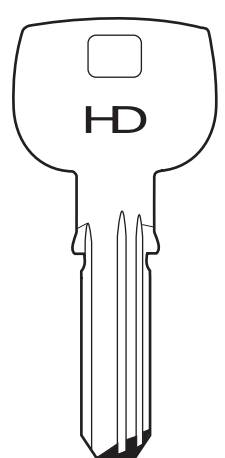


STE5